

Matt High Resolution Paper Printing Instructions



General Description

High resolution matt coated paper for use on all inkjet printers and all inks. Print high resolution images on this paper while maintaining sharpness and wide colour gamut.

Store paper flat in original packaging to avoid exposure to humidity and dirt. Keep away from direct sunlight and at room temperature.

Printing set up instructions are provided as a guideline. Final results depend on the type of ink used and whether original or compatible. Some adjustment might be required to the printer driver in order to get the optimal results.

In the very unlikely event that media does not feed in the printer, a gentle push as the printer attempts to pick up the paper might assist in feeding. Worn and contaminated feeding rollers on older printers may also effect feeding. Rollers can be cleaned with acetone or alcohol to improve the feeding of paper

Printer Set Up

General:

- Print on the whiter side which may appear chalkier
- If image quality is low, try printing on the opposite side
- Multi feeding is normally possible but some printers require this paper to be individually fed

Epson® Printers:

Media Type - Epson Matte or Photo
Quality Inkjet Paper
Print Quality - Photo or Best Photo
Color Control - Epson Vivid

Canon® Printers:

Media Type - High Resolution Paper
Print Quality - High
Color Control - Auto

HP® Printers:

Media Type - HP Premium Paper
Print Quality - Normal or Best
Color Control - ColorSmart/sRGB or
defaults

Lexmark® & Dell®:

Media Type - Coated Paper
Print Quality - Normal, Better or Best
Color Control – Defaults

Kodak®, Samsung®, Sharp® etc.

Also supported
Select similar settings as listed above

Photo Paper Direct Ltd.
Unit 8, Shakespeare Industrial Estate, Watford, WD24 5RR
T: +44 (0)1923 232 590 E: sales@photopaperdirect.com

Web: www.photopaperdirect.com

F: [facebook.com/PhotoPaperDirectUK](https://www.facebook.com/PhotoPaperDirectUK) T: twitter.com/PhotoPaper G: plus.google.com/+photopaperdirect/