

Double Sided Paper Printing Instructions



General Description

High resolution double sided papers suitable for use on all inkjet printers and all inks. Great for double sided presentations, calendars, booklets and albums.

Store paper flat in original packaging to avoid exposure to humidity and dirt. Keep away from direct sunlight and at room temperature. Printing set up instructions are provided as a guideline. Final results depend on the type of ink used and whether original or compatible. Some adjustment might be required to the printer driver in order to get the optimal results.

In the very unlikely event that media does not feed in the printer, a gentle push as the printer attempts to pick up the paper might assist in feeding. Worn and contaminated feeding rollers on older printers may also effect feeding. Rollers can be cleaned with acetone or alcohol to improve the feeding of paper

Printer Set Up

General:

- Printing is possible on both sides – Please select the instructions for the relevant finish (glossy or matt)
- **Feed paper in single sheets**
- The image dries instantly and can be handled immediately after removing from the printer

180g Gloss/Matt, 180g Gloss/Gloss Printing Instructions for Glossy Side

Epson® Printers:

Media Type - Epson Ultra Glossy or Premium
Semigloss Photo Paper
Print Quality - Photo or Best Photo
Colour Control - Epson Vivid

Canon® Printers:

Media Type - Photo Paper Plus Glossy
Print Quality - High
Colour Control – Auto

HP® Printers:

Media Type - HP Advanced Photo Paper
Print Quality - Best
Colour Control - ColourSmart/sRGB or defaults

Lexmark® & Dell®:

Media Type - Glossy Photo Paper
Print Quality - Best
Colour Control - Defaults

Kodak®, Samsung®, Sharp® etc.

Also supported
Select similar settings as listed above

120g Satin, 130g Brochure, 210g Double Sided, Matt Side of 180g Gloss/Matt

Epson® Printers:

Media Type - Epson Matte or Photo Quality
Inkjet Paper
Print Quality - Photo or Best Photo
Colour Control - Epson Vivid

Canon® Printers:

Media Type - High Resolution Paper
Print Quality - High
Colour Control - Auto

HP® Printers:

Media Type - HP Premium Paper
Print Quality - Normal or Best
Colour Control - ColourSmart/sRGB or
defaults

Lexmark® & Dell®:

Media Type - Coated Paper
Print Quality - Normal, Better or Best
Colour Control - Defaults

Kodak®, Samsung®, Sharp® etc.

Also supported
Select similar settings as listed above

Photo Paper Direct Ltd.
Unit 8, Shakespeare Industrial Estate, Watford, WD24 5RR
T: +44 (0)1923 232 590 E: sales@photopaperdirect.com

Web: www.photopaperdirect.com

F: [facebook.com/PhotoPaperDirectUK](https://www.facebook.com/PhotoPaperDirectUK) T: twitter.com/PhotoPaper G: plus.google.com/+photopaperdirect/