

# Photo Paper Printing Instructions



## General Description

---

Glossy or Satin (Pearl) finish papers suitable for printing high resolution photographs.

Store paper flat in original packaging to avoid exposure to humidity and dirt. Keep away from direct sunlight and at room temperature.

Printing set up instructions are provided as a guideline. Final results depend on the type of ink used and whether original or compatible. Some adjustment might be required to the printer driver in order to get the optimal results.

In the very unlikely event that media does not feed in the printer, a gentle push as the printer attempts to pick up the paper might assist in feeding. Worn and contaminated feeding rollers on older printers may also effect feeding. Rollers can be cleaned with acetone or alcohol to improve the feeding of paper

## Printer Set Up

---

### General:

- Print on either the glossy or the satin/pearl sides.
- The image dries instantly or almost instantly and can be handled immediately after removing from the printer
- Should the print appear washed out or not as clear as expected, check that the correct side was printed on

### Glossy

**180g, 200g, 240g, 250g, 260g, 280g, 300g**  
Some Profiles Available

### Printer Set Up Instructions

#### Epson® Printers:

Media Type - Epson Ultra Glossy or Premium  
Semigloss Photo Paper  
Print Quality - Photo or Best Photo  
Colour Control - Epson Vivid

#### Canon® Printers:

Media Type - Photo Paper Plus Glossy  
Print Quality - High  
Colour Control - Auto

#### HP® Printers:

Media Type - HP Advanced Photo Paper  
Print Quality - Best  
Colour Control - ColorSmart/sRGB or defaults

#### Lexmark® & Dell®:

Media Type - Glossy Photo Paper  
Print Quality - Best  
Colour Control - Defaults

#### Kodak®, Samsung®, Sharp® etc.

Also supported  
Select similar settings as listed above

**Satin/Pearl 200g, 260g, 280g, 290g DUO**  
Some Profiles Available

### Printer Set Up Instructions

#### Epson® Printers:

Media Type - Epson Ultra Glossy or Premium  
Semigloss Photo Paper  
Print Quality - Photo or Best Photo  
Colour Control - Epson Vivid

#### Canon® Printers:

Media Type - Photo Paper Plus Glossy  
Print Quality - High  
Colour Control - Auto

#### HP® Printers:

Media Type - HP Advanced Photo Paper  
Print Quality - Best  
Colour Control - ColorSmart/sRGB or defaults

#### Lexmark® & Dell®:

Media Type - Glossy Photo Paper  
Print Quality - Best  
Colour Control - Defaults

#### Kodak®, Samsung®, Sharp® etc.

Also supported  
Select similar settings as listed above

Photo Paper Direct Ltd.  
Unit 8, Shakespeare Industrial Estate, Watford, WD24 5RR  
T: +44 (0)1923 232 590 E: sales@photopaperdirect.com

Web: [www.photopaperdirect.com](http://www.photopaperdirect.com)

F: [facebook.com/PhotoPaperDirectUK](https://www.facebook.com/PhotoPaperDirectUK) T: [twitter.com/PhotoPaper](https://twitter.com/PhotoPaper) G: [plus.google.com/+photopaperdirect/](https://plus.google.com/+photopaperdirect/)